


AD Enclosure - Booster-Start

Search and Secure Procedure

Booster-Start

BoosterStart.V1.0

1. "A" and "B" reset Interlock box #1, a light link gate.
2. "B" holds, while "A" resets Interlock Box #2. "A" then backtracks to make eye contact with "B".
3. After "A" and "B" make eye contact, "B" sweeps the tunnel to "8" and waits to make eye contact with "A".
4. "A" sweeps the tunnel to "5", checking the stairway to interlock box #2 on the way.
5. "A" looks under the dump and proceeds to "6".
6. "A" makes eye contact with "B", then walks around the RDF dump, checking around, above and below.
7. "A" resets interlock box #3 then sweeps the tunnel and floor grates to join "B" at "8".
8. "B" Waits to make eye contact with "A".
9. "A" and "B" continues with the Booster Search and Secure.

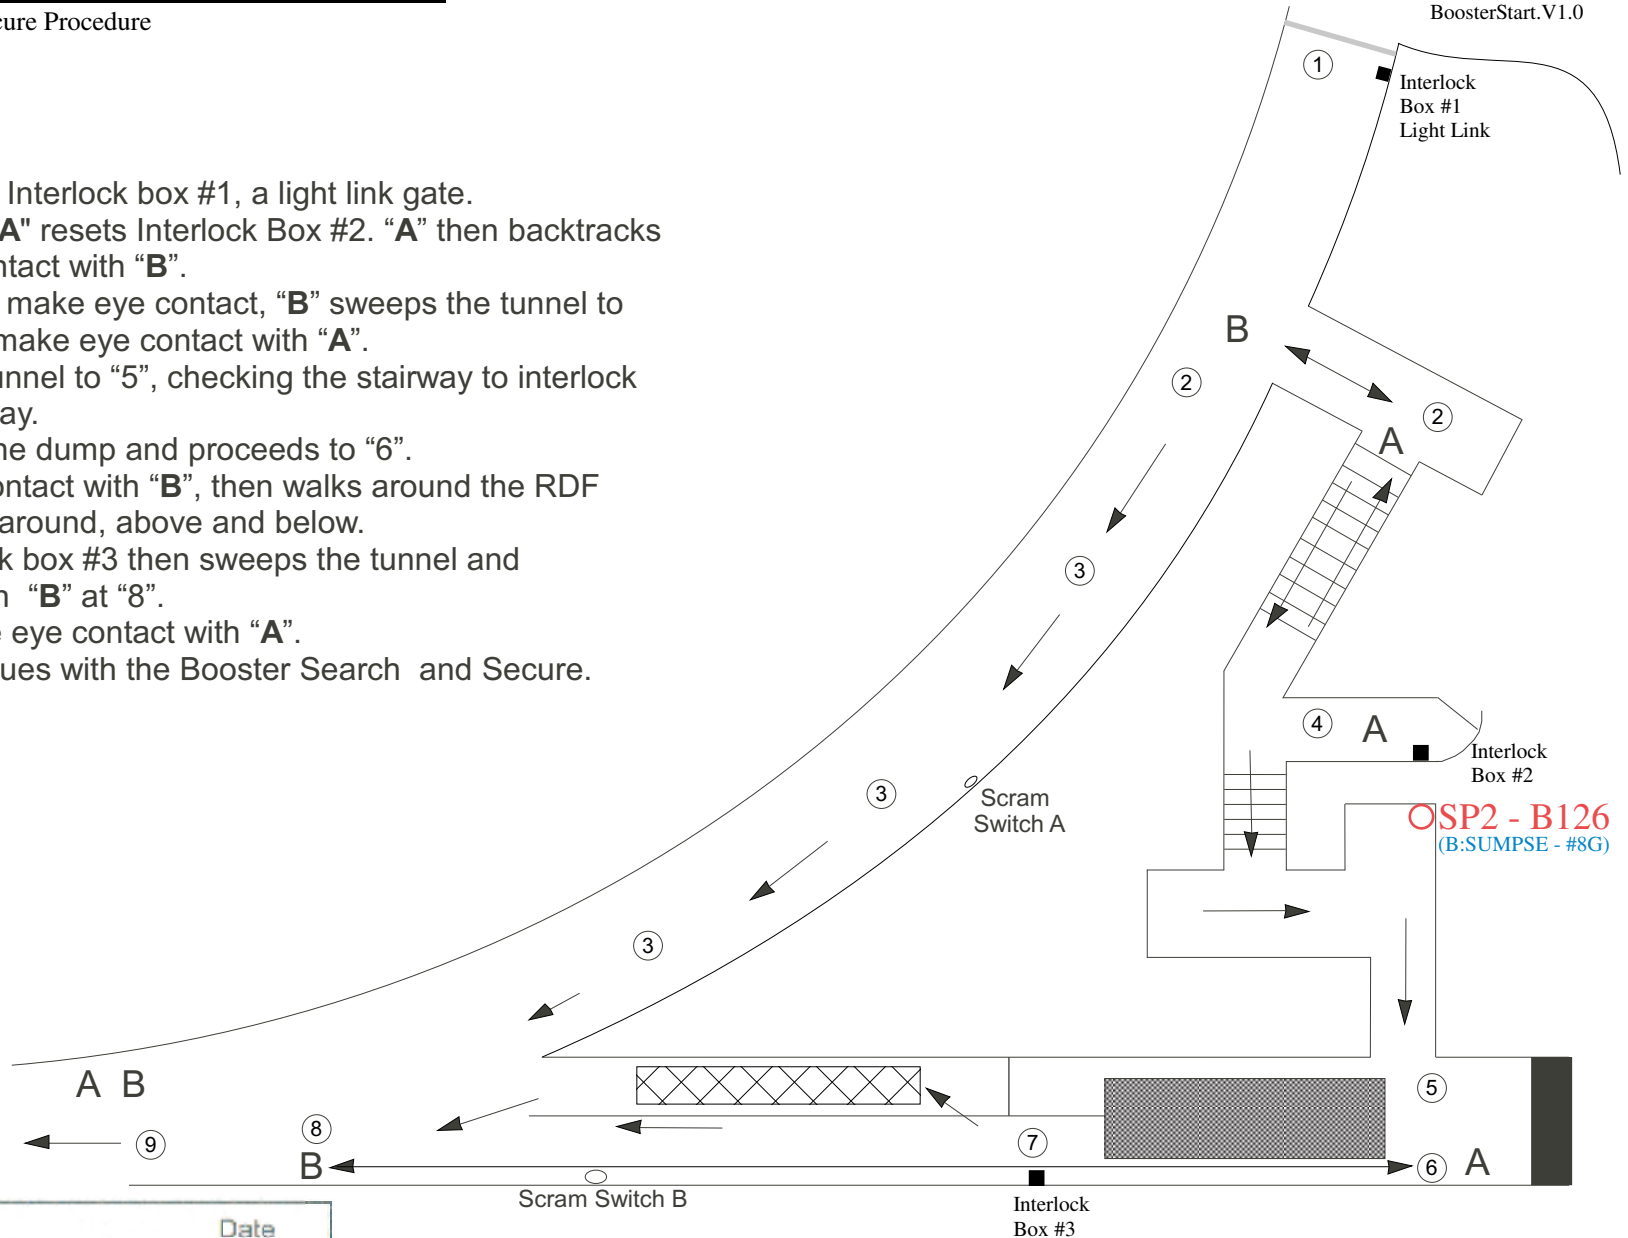

OSP2 - B126
(B:SUMPSE - #8G)

Reviewed AD/RSO	Date
<i>Michael A. Gerardi</i>	4-1-09
Approved AD/OPS Dept. Head	Date
<i>[Signature]</i>	4-2-09

CONTROLLED DOCUMENT

Users are responsible for ensuring they work to the latest approved revision. Printed or electronically transmitted copies are uncontrolled.

spb 17 Dec 2007
Version 1.0